



READ ME FIRST!



⚠️WARNING The **MrSteam® Virtual Tech** instructions are intended to assist electricians troubleshoot and service MrSteam steam generators and accessories. All troubleshooting and/or service must be performed by qualified and licensed electricians only. MrSteam steam generators contain high voltage electrical components that can cause injury or death. Always read the complete MrSteam Installation and Instruction Manual supplied with the product. Manuals are available at www.mrsteam.com under Technical Downloads. Technical Support Representatives can be reached by calling 800-767-8326 or 800-727-8326.

As you follow these instructions, you will notice WARNING, CAUTION and NOTICE symbols. This blocked information is important for the safe and efficient troubleshooting and service of MrSteam products. These are types of potential hazards that may occur during installation and operation:

⚠️WARNING Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.

⚠️CAUTION Indicates a potentially hazardous situation, which, if not avoided may result in minor or moderate injury or product damage.

⚠️NOTICE This highlights information that is especially relevant to a problem-free installation.

All information in these instructions is based on the latest product information available at the time of publication. Sussman-Automatic Corporation reserves the right to make changes at any time without notice.

⚠️WARNINGS

- Never use damaged or equipment requiring service, doing so may result in an inoperative or hazardous installation.
- Discontinue use of the steam generator, control and accessories if they are damaged or otherwise not functioning properly. Doing so may result in an inoperative or hazardous installation
- MrSteam steam generators are connected to 240V line voltage and contain live electrical components. All installation and service to be performed by qualified and licensed electricians and plumbers only. Installation or service by unqualified persons or failure to use MrSteam parts may result in property damage or in an electrical shock hazard.
- The MS series of steam generators are for residential use only. Commercial or other nonresidential applications void the warranty and may adversely affect product performance and may represent a safety hazard.



Product: Residential Generators

Problem: Buzzing Only When Turned On

If your steam unit is buzzing only when turned on at the control, you may need to replace the contactor.

Replacement part for MS90-400: PN 100476-2

Replacement part for MSSuper1-3: PN103453

⚠ WARNING All electrical trouble shooting to be performed by a qualified licensed electrician. **Trouble shooting or service by anyone other than a qualified licensed electrician may result in electrocution.**

⚠ WARNING Shock Hazard. Power must be disconnected at the main electrical supply **before servicing. Failure to disconnect power may result in electrocution.** Remove steam generator covers. Retain screws and covers for reuse.

1. Shut power off to your steam unit at the main breaker.(ensure all lights are off on the unit)
2. Remove top cover from the steam unit.
3. Remove incoming power supply lines. (Step 1)

4. Remove "blue" heating element wires from contactor. (step 2)
5. Remove both black transformer wires. (Step 3)
6. Remove white/red and red wire from both sides of the contactor. (Step 4)
7. Unbolt the contactor and replace with new one.
8. Install wires in same location as they were removed.
9. Re-install lid to steam unit.
10. Turn power back on at main breaker.
11. Test your steam unit

If buzzing noise is coming from water feed solenoid please refer to H²O Code.

