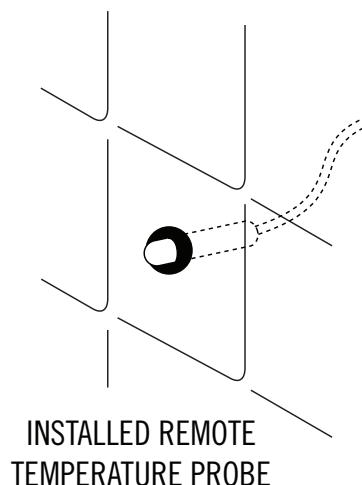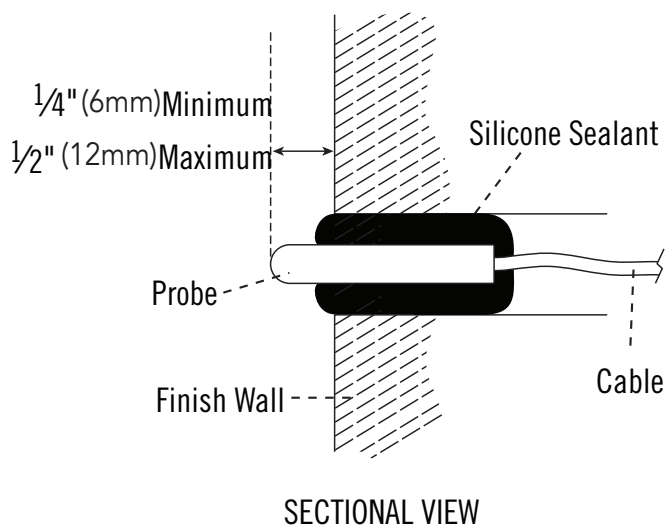## MSTS/iMSTS in Room Temperature Sensor

BOX CONTENT

• MSTS/iMSTS probe with wire attached

FUNCTION

• Used to accurately read the temperature inside the steam room and send it to the controller.

• MSTS is for use with the iSteam3, AirTempo, iTempoPlus or iTempo controls.

• iMSTS is for use with the iSteam® and iSteam2.0 controls only

1/4" (6mm) Minimum
1/2" (12mm) Maximum
Silicone Sealant
Probe
Finish Wall
Cable

SECTIONAL VIEW

INSTALLED REMOTE
TEMPERATURE PROBE

FOR ILLUSTRATIVE PURPOSES ONLY.   IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION
visit mrsteam.com before installation to download the Installation, Operation and
Maintenance Manual or refer to the manual provided with the unit.

MODEL	PROJECT INFORMATION		
☐ iMSTS ☐ MSTS	Location:		Contractor:
	Architect:		Submitted By:
	Engineer:		Date:
Notes:			

mr.steam® hello@mrsteam.com • www.mrsteam.com
43-20 34th Street, Long Island City, NY 11101 TEL: 1 800 76 STEAM
9410 S. La Cienega Blvd. Inglewood CA 90301 TEL: 1 800 72 STEAM

TS0055 REV. 5.22