

Butler Flex

Butler Flex Package

For Models MS90 to MSSUPER3

Box Contents

- FlexTempo Control
- Steamhead
- SteamLinx
- AutoFlush
- Condensation Pan

Max Butler Flex Package

For models MX4, MX5 and MX6

Same as Butler Flex except with a Max AutoFlush, Max condensation Pan and additional Steamhead

Note: When ordering with the linear steamhead, standard steamhead(s) are replaced with 104480 Linear Steamheads(s)



SteamLinx Mobile App



FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION

visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL		PROJECT INFORMATION	
☐		Location:	Contractor:
		Architect:	Submitted By:
		Engineer:	Date:
Notes:			



TempoFlex

TempoFlex is the steamshower control with the convenience of RF wireless connectivity with no cable needed to the steam generator. You can enjoy flexible and easy installation along with an elegant design and an intuitive interface, along with a built-in rechargeable battery. The control may be permanently installed with power wiring so it never needs to be recharged.

TempoFlex Control Features:

- Wall mounted, rechargeable battery powered wireless control
- LCD Display
- Capacitive touch panel
- 60 foot range from generator
- Programmable temperature
- AromaSteam Steamhead in matching finish
- Wireless Receiver
- Compatibility with StemLinX
- Control of ChromaX
- Can be permanently installed with power wiring

TempoFlex control is design to be installed inside or outside the steam room but is primarily installed inside the steam room. If the control is installed inside the steam room the control must be located:


- 4-5 feet above the floor
- In a location representative of the desired steam bathing temperatures. DO NOT locate the control above it near the steam head or direct steam emissions
- On a vertical wall

If installed outside the steam room a remote temperature probe (MSTS) must be installed inside the steam room

FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

Box Contents:

- TempoFlex
- SteamHead
- Wireless Receiver
- Control Cable (3 ft)
- Tube of Silicone Sealant
- Charger
- 30' Cable For Permanent Install
- Mounting Hardware

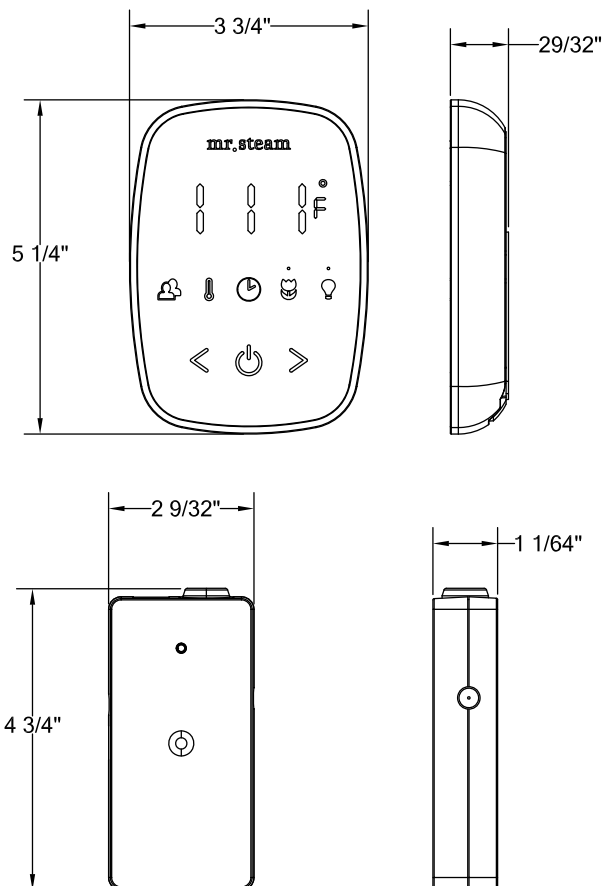


MODEL	FINISH	PROJECT INFORMATION
TempoFlex	☐ BB Brushed Bronze	Location:
	☐ BL Brilliant Black	Architect:
	☐ BN Brushed Nickel	Engineer:
	☐ MB Matte Black	Contractor:
	☐ NB Nouveau Bronze	Submitted By:
	☐ OB Oil Rubbed Bronze	Date:
	☐ PB Polished Brass	Notes:
	☐ PC Polished Chrome	
COLOR ☐ WH White ☐ BK Black	☐ PG Polished Gold	
	☐ PN Polished Nickel	
	☐ SN Satin Brass	
	☐ ST Satin Steel	
	☐ WH White Finish	

AromaSteam Steamhead

(3/4" NPT)

- Even distribution of steam while remaining cool to the touch
- No field assembly required
- No moving parts
- Integrated aromatherapy oil well for in shower use

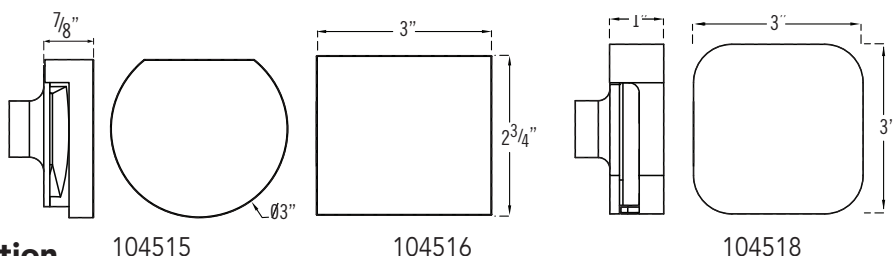

Round & Square Steamhead Installation

(3/4" NPT)


IMPORTANT: DO NOT disassemble steamhead. MrSteam's steam head is shipped fully assembled and requires no additional assembly.

CAUTION Because the steamhead and direct steam emissions are very hot, locate the steamhead where incidental contact by bather with the steamhead or direct steam emission cannot occur.

NOTE: A 1.5" clearance hole around the steam pipe is needed to mount the steamhead. Locate steamhead 6-12 inches above floor, except for:

- Tub/shower enclosures, install 6 inches above tub top edge.
- For enclosures with acrylic or other non-heat resistant flooring install Acrylic Shield Part Number 103938 /10398SQ

IMPORTANT NOTE: To preserve steamhead finish, **DO NOT** use wrench or other tools to tighten. **DO NOT** use abrasive cleansers or chemicals. Use only water with mild soap and a non-abrasive sponge.

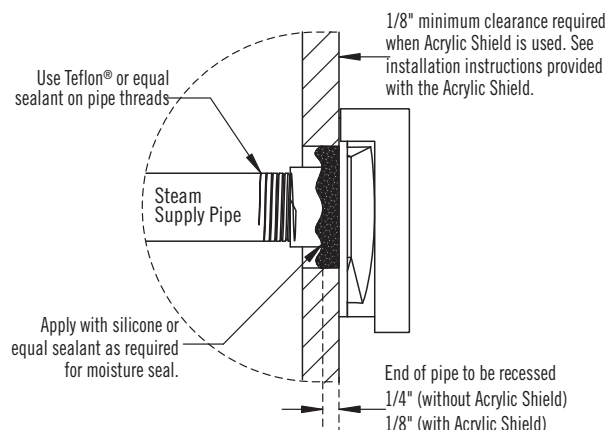

CAUTION Consult with supplier of acrylic, fiberglass and other non-heat resistant enclosures for recommended steamhead location. Use Acrylic Shield PN 103938/ 103938SQ. See instructions provided with steam shield. (An acrylic shield is not available for the iSteam steamhead.)

FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	FINISH	PROJECT INFORMATION
☐ 104515	☐ BB Brushed Bronze	Location:
☐ 104516	☐ BL Brilliant Black	Architect:
☐ 104518	☐ BN Brushed Nickel	Engineer:
	☐ MB Matte Black	Contractor:
	☐ NB Nouveau Bronze	Submitted By:
	☐ OB Oil Rubbed Bronze	Date:
	☐ PB Polished Brass	Notes:
	☐ PC Polished Chrome	
	☐ PG Polished Gold	
	☐ PN Polished Nickel	
	☐ SB Satin Brass	
	☐ SG Satin Gold	
	☐ SN Satin Nickel	
	☐ ST Satin Steel	
	☐ WH White Finish	


Linear Steam Head®

- Quiet, even distribution of steam
- No field assembly required
- Finished Look
- No moving parts
- Minimal profile
- Aroma Feature

Linear Steamhead Installation: (3/4" NPT)

IMPORTANT: Do not disassemble steamhead. MrSteam's steamhead is shipped fully assembled and requires no additional assembly. Locate steamhead 6-12 inches above floor, except for tub/shower enclosures; install 6 inches above tub top edge.

- CAUTIONS** Because the steamhead and direct steam emissions are very hot, locate the steamhead where incidental contact by bather with the steamhead or direct steam emission cannot occur.
- Linear Steam Head model 104480 is suitable for MrSteam generator models MS90-400, MSSUPER1-3 and MX4-MX6.
 - Two 104480 linear steamheads must be used for models MX4, 5 & 6.
 - Using model 104480 for any steam generator model larger than the MX6, or for any non MrSteam brand generators may result in an improper installation or hazardous condition.
 - For residential use only.
 - Install in a upright orientation only. Installation in a any other orientation may concentrate the steam and result in excessive temperatures.

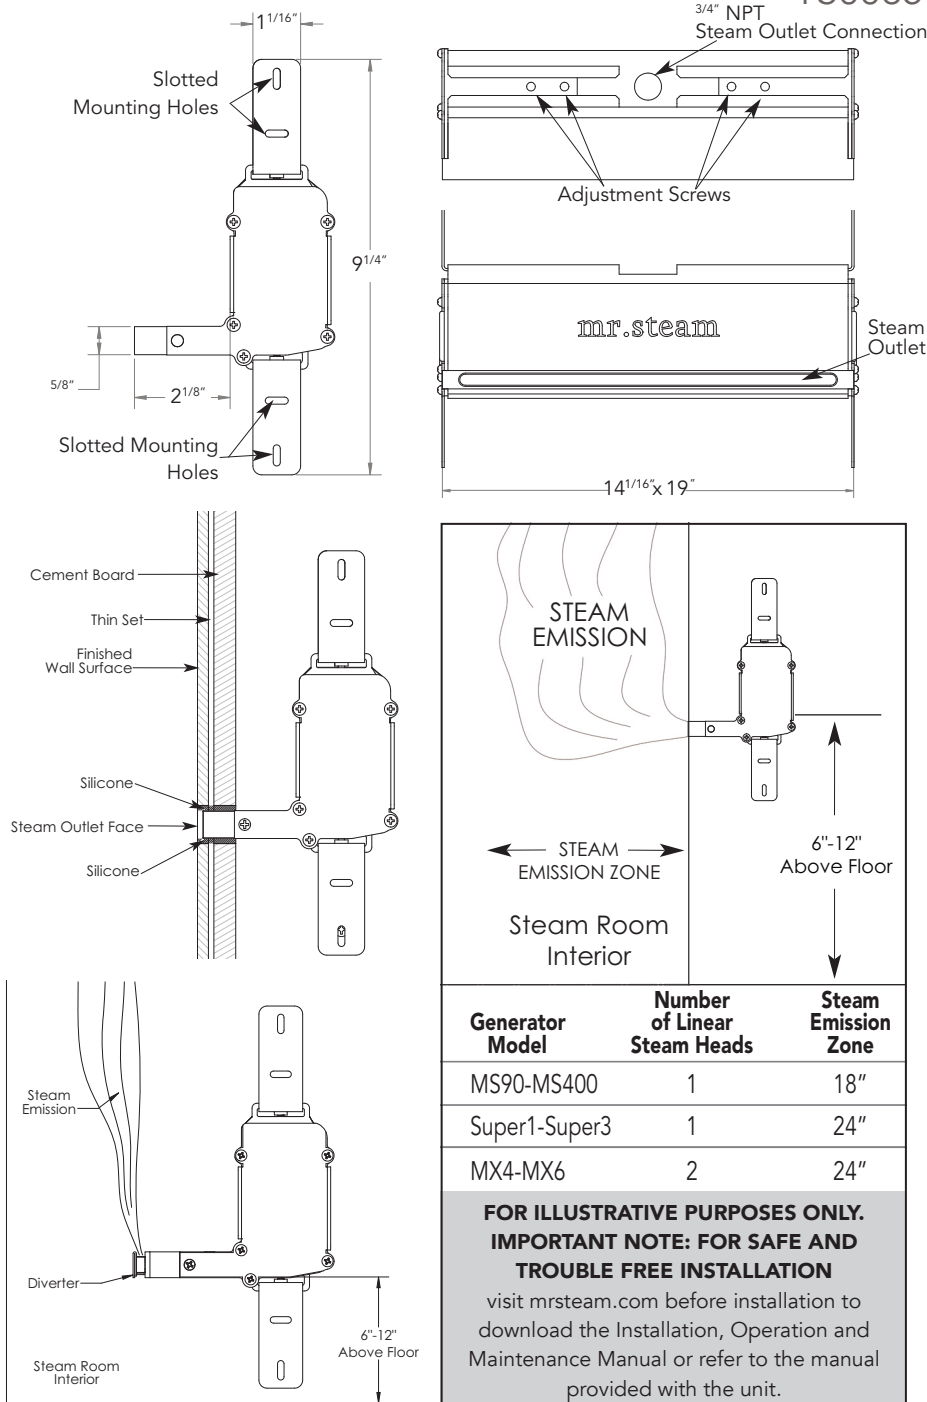

MODEL 104480	PROJECT INFORMATION	
☐ BL ☐ BB ☐ BN ☐ MB ☐ NB ☐ PB ☐ PG ☐ PC ☐ PN ☐ OB ☐ ST ☐ SB ☐ WH	Location:	Contractor:
One 104495 may be used with MX4, MX5 & MX6. See technical specification TS0088 for more information	Architect:	Submitted By:
Notes:	Engineer:	Date:

Linear Steam Head®

TS0085

Accessories


CAUTIONS because the Steam Head, Faceplate, Diverter, AromeTray, Escutcheon, Finished Diverter, and direct steam emission are very hot, locate the Steam Head, Faceplate, Diverter, AromeTray, Escutcheon, Finished Diverter where incidental contact by bather or direct steam emission cannot occur.

Included Accessories


Faceplate



AromaTray
(Black Chrome Finish Only)

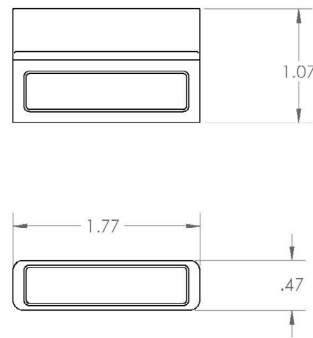


Diverter
(Stainless Steel Finish Only)

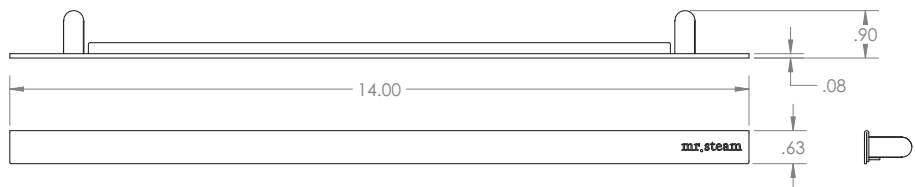


Optional Accessories

Escutcheon

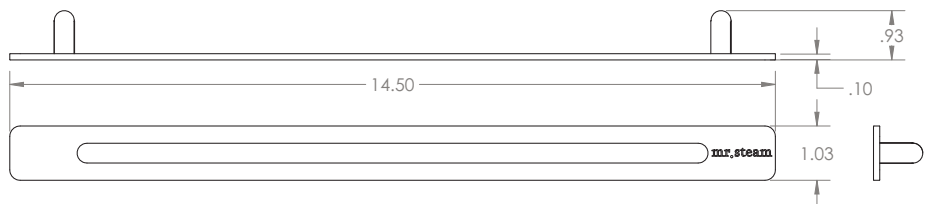

Diverter - Finished

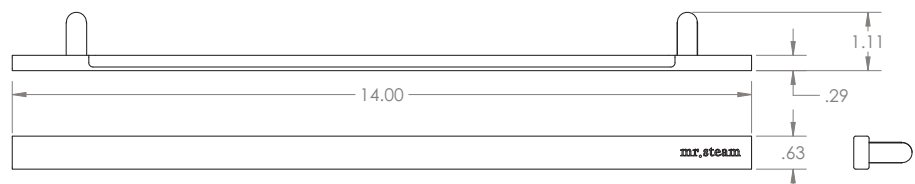

- | | | | |
|---|---|---|---|
| ☐ BL Brilliant Black | ☐ BB Brush Bronze | ☐ BN Brush Nickel | ☐ MB Matte Black |
| ☐ PB Polish Chrome | ☐ PG Polished Gold | ☐ PC Polish Chrome | ☐ PN Polish Nickel |
| ☐ NB Nouveau Bronze | ☐ ST Satin Steel | ☐ OB Oil Rubbed Bronze | ☐ SB Satin Brass |
| ☐ WH White | | | |

NOTE: Drawings are for illustrative purposes only. Consult with qualified designer, architect or contractor for steam room construction.

SteamLinx™

BOX CONTENT

- SteamLinx Generator Module
- SteamLinx Router Module
- 6 foot Ethernet Cord
- Power Adapter

SteamLinx

Introducing the latest Mobile Steam Room Technology, the SteamLinx Mobile System. SteamLinx allows for seamless control of essential steam room functionality using your smart phone or mobile device.


*Included in all Dream & Butler Packages
(Except Basic Butler).*

Works with all MrSteam Controls

App available for download from Google Play and the App Store

FOR ILLUSTRATIVE PURPOSES ONLY.

IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

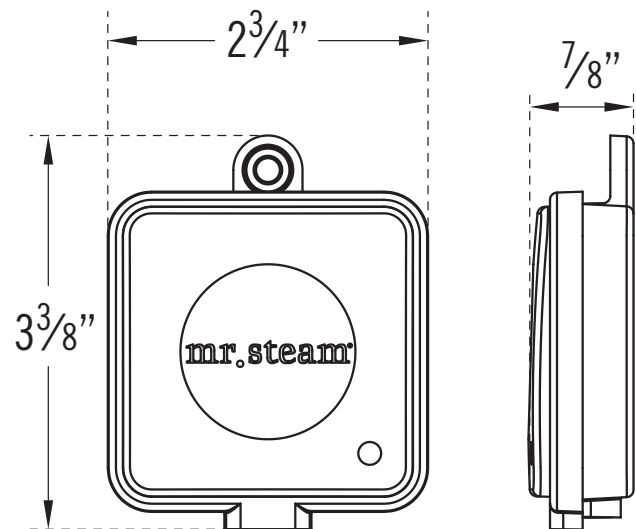

MODEL	PROJECT INFORMATION	
SteamLinx	Location:	Contractor:
	Architect:	Submitted By:
	Engineer:	Date:
Notes:		

AutoFlush®

Box Contents


- AutoFlush Valve with Cord
- Installation instructions

Operation

The optional AutoFlush System feature automatically drains the MrSteam system following each use. A time delay allows the water to cool down (about two hours) before it drains by gravity for a safe and gentle operation.

Note: If the Express Steam® option has been installed, the AutoFlush will drain for ten minutes then refill with fresh water to begin the pre-heat cycle.

AutoFlush Shown Fully Assembled

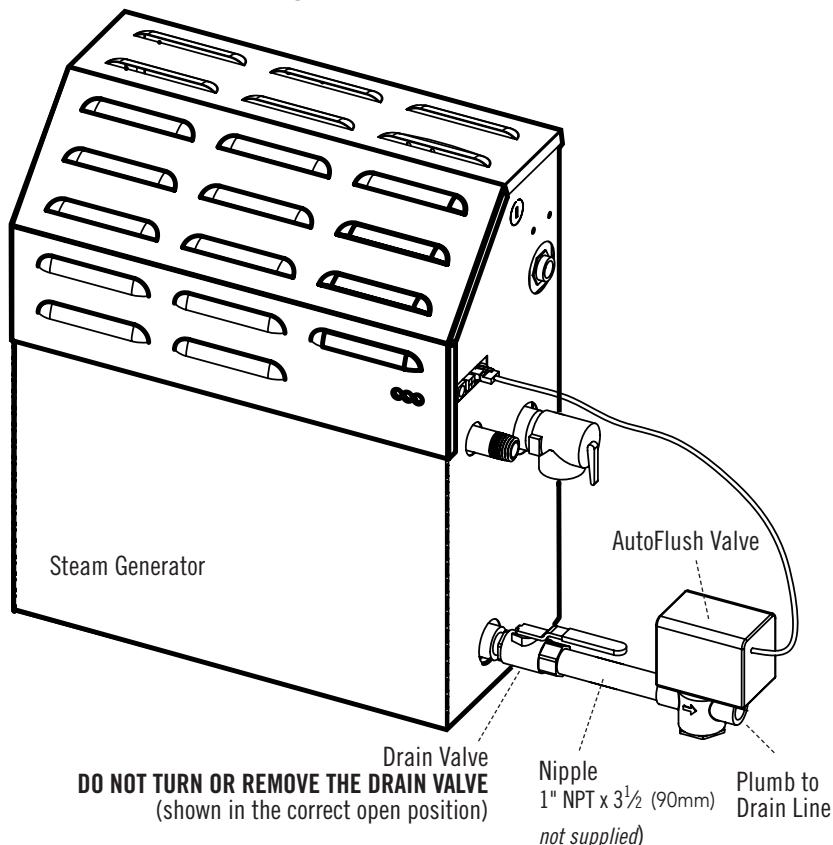

Our exclusive AutoFlush automatically and electronically drains the system, providing CleanSteam... Every Time® and introduces fresh water.

FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	PROJECT INFORMATION	
MS 81500E	Location:	Contractor:
	Architect:	Submitted By:
	Engineer:	Date:
Notes:		


Condensation Pan

103867 & 104402

Mr.Steam strongly recommends the use of a condensation pan in the unlikely event of a plumbing leak.

Locate the condensation pan on a solid level surface and place the steam generator inside the condensation pan. Insure the steam generator is level.

All plumbing shall be performed by a qualified licensed plumber and in accordance with applicable national and local codes. Check local plumbing code for receptor, trap and vent requirements. Condensation pans drain by gravity. The condensation pan is equipped with an integral 3/4" NPT fitting.

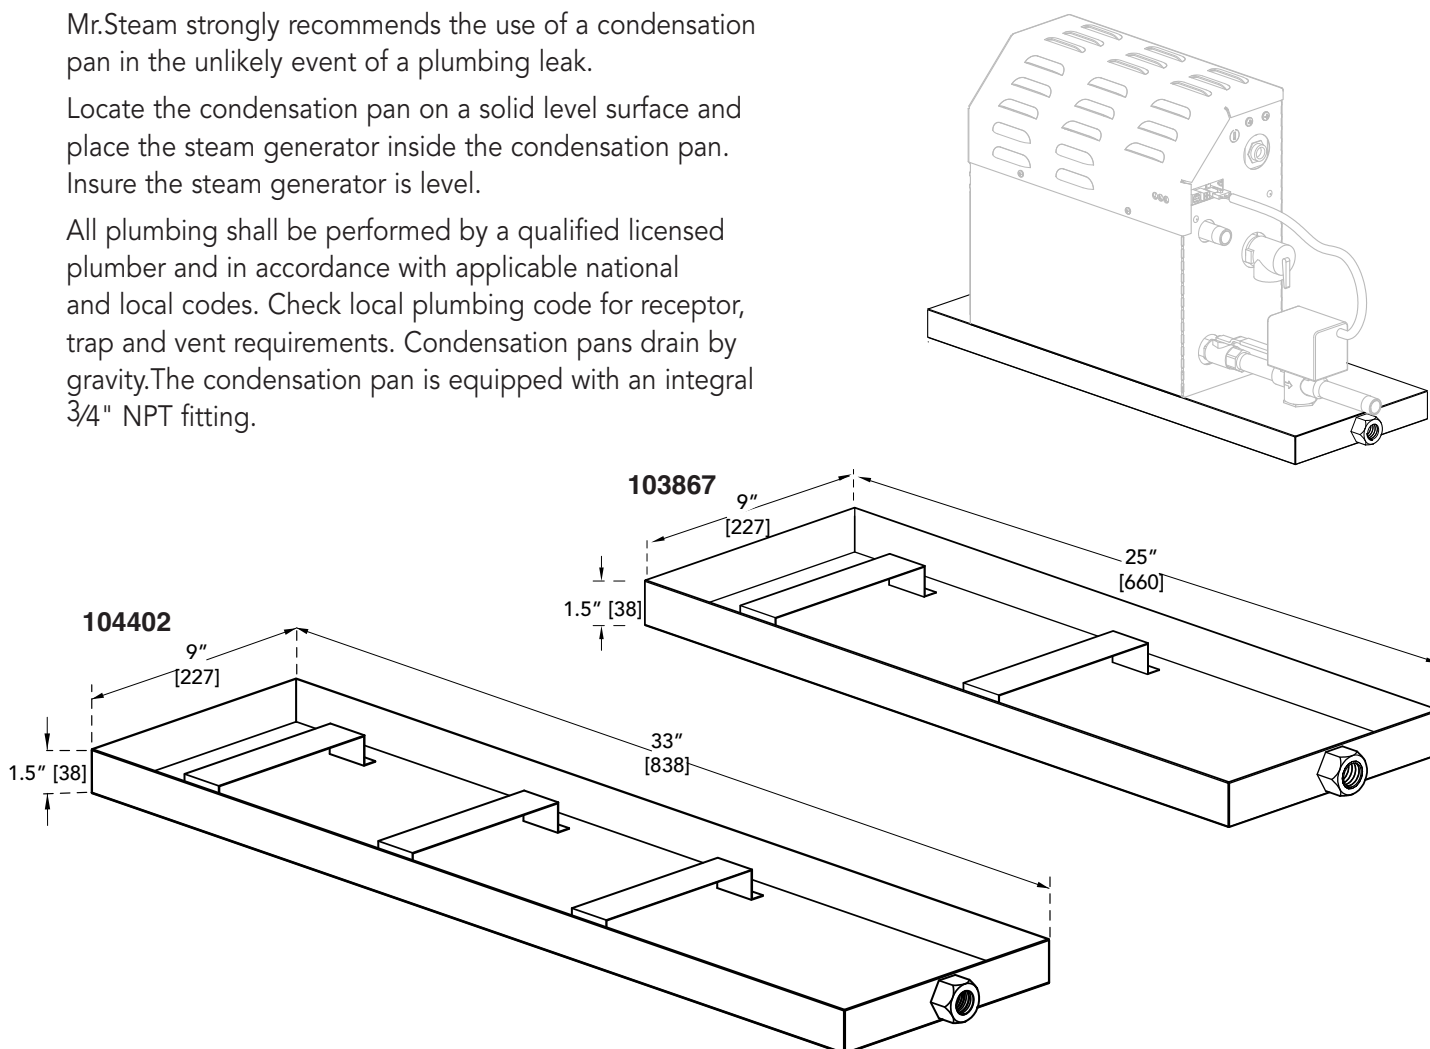

NOTE: For MX4E, MX5E and MX6E use model 104402

FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	PROJECT INFORMATION	
☐ 103867	Location:	Contractor:
☐ 104402	Architect:	Submitted By:
	Engineer:	Date:
Notes:		