

Butler Touch

Butler Flex Package

For Models MS90 to MSSUPER3

Box Contents

- TempoTouch Control
- AutoFlush
- Condensation Pan

Note: When ordering with the linear steamhead, standard steamhead are replaced with 104480 Linear



FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION

visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL		PROJECT INFORMATION	
☐		Location:	Contractor:
		Architect:	Submitted By:
		Engineer:	Date:
Notes:			



TempoTouch® Control

TempoTouch control must be surface mounted in the steam/shower enclosure through a 1-1/8" [28.5mm] diameter hole.

TempoTouch Control Feature:

- Solid decorative bezel with choice of designer finishes
- Touch ON/OFF button
- Arc swipe to change temperature
- Steamhead in matching finish
- Temperature Setting Indicator

The TempoTouch control are designed to be installed inside or outside the steam room but is primarily installed inside the steam room. If the control is installed inside the steam room the control must be located:

- 4-5 ft. (1.2 – 1.5m) above the floor
- in a location representative of the desired steam bathing temperatures. Do not locate the control above or near the steam head or direct steam emissions
- on a vertical wall.

The control cable length is 30 ft. [9m]. Insure that the control and/or steam generator are located accordingly.


An optional 60 ft. [18m] cable is available if required, PN 104678-60.

If the control is installed outside the steam room a Remote Temperature Probe Part Number MSTS must be installed inside the steam room.

BOX CONTENTS:

- TempoTouch
- Steamhead
- Control Cable (30 ft.) (9m)
- Tube of Silicone Sealant
- Owner's Manual

Dimensions for Round & Square Controls:

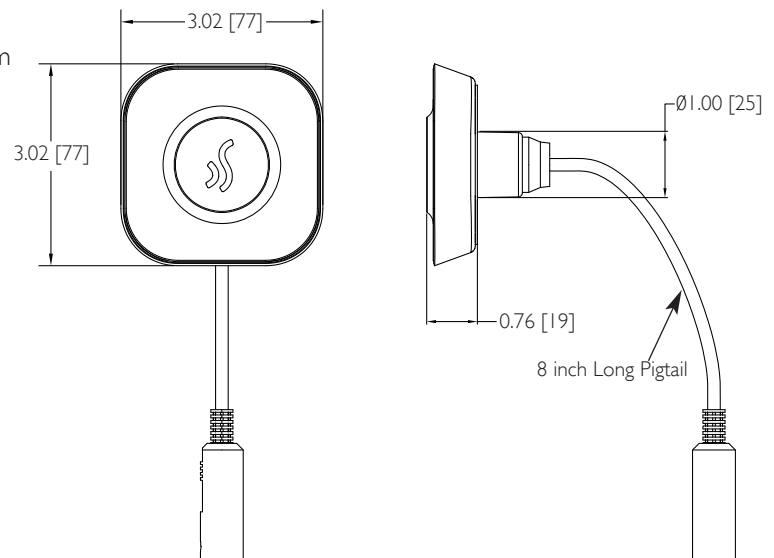

FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION


visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	FINISH		PROJECT INFORMATION
TempoTouch	☐ BB - Brushed Bronze	☐ PC - Polished Chrome	Location:
	☐ BL - Brilliant Black	☐ PG - Polished Gold	Architect:
	☐ BN - Brushed Nickel	☐ PN - Polished Nickel	Engineer:
	☐ MB - Matte Black	☐ SB - Satin Brass	Contractor:
	☐ NB - Nouveau Bronze	☐ ST - Satin Steel	Submitted By:
	☐ ORB - Oil Rubbed Bronze	☐ WH - White Finish	Date:
	☐ PB - Polished Brass		
Notes:			

AromaSteam Steamhead

(3/4" NPT)

- Even distribution of steam while remaining cool to the touch
- No field assembly required
- No moving parts
- Integrated aromatherapy oil well for in shower use

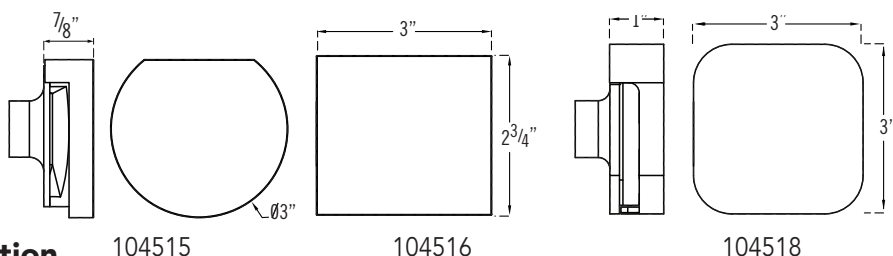

Round & Square Steamhead Installation

(3/4" NPT)


IMPORTANT: DO NOT disassemble steamhead. MrSteam's steam head is shipped fully assembled and requires no additional assembly.

CAUTION Because the steamhead and direct steam emissions are very hot, locate the steamhead where incidental contact by bather with the steamhead or direct steam emission cannot occur.

NOTE: A 1.5" clearance hole around the steam pipe is needed to mount the steamhead. Locate steamhead 6-12 inches above floor, except for:

- Tub/shower enclosures, install 6 inches above tub top edge.
- For enclosures with acrylic or other non-heat resistant flooring install Acrylic Shield Part Number 103938 /10398SQ

IMPORTANT NOTE: To preserve steamhead finish, **DO NOT** use wrench or other tools to tighten. **DO NOT** use abrasive cleansers or chemicals. Use only water with mild soap and a non-abrasive sponge.

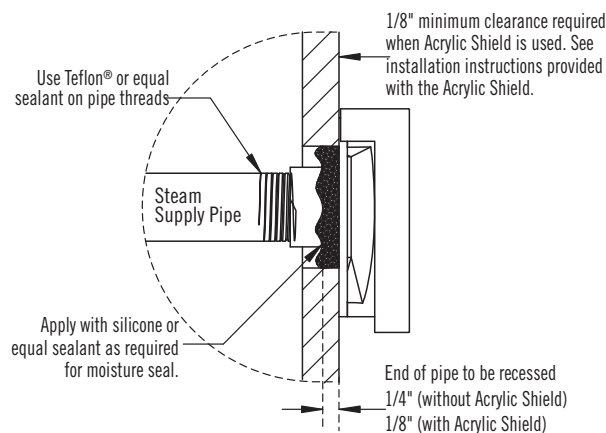

CAUTION Consult with supplier of acrylic, fiberglass and other non-heat resistant enclosures for recommended steamhead location. Use Acrylic Shield PN 103938/ 103938SQ. See instructions provided with steam shield. (An acrylic shield is not available for the iSteam steamhead.)

FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	FINISH	PROJECT INFORMATION
☐ 104515	☐ BB Brushed Bronze	Location:
☐ 104516	☐ BL Brilliant Black	Architect:
☐ 104518	☐ BN Brushed Nickel	Engineer:
	☐ MB Matte Black	Contractor:
	☐ NB Nouveau Bronze	Submitted By:
	☐ OB Oil Rubbed Bronze	Date:
	☐ PB Polished Brass	Notes:
	☐ PC Polished Chrome	
	☐ PG Polished Gold	
	☐ PN Polished Nickel	
	☐ SB Satin Brass	
	☐ SG Satin Gold	
	☐ SN Satin Nickel	
	☐ ST Satin Steel	
	☐ WH White Finish	


Linear Steam Head®

- Quiet, even distribution of steam
- No field assembly required
- Finished Look
- No moving parts
- Minimal profile
- Aroma Feature

Linear Steamhead Installation: (3/4" NPT)

IMPORTANT: Do not disassemble steamhead. MrSteam's steamhead is shipped fully assembled and requires no additional assembly. Locate steamhead 6-12 inches above floor, except for tub/shower enclosures; install 6 inches above tub top edge.

- CAUTIONS** Because the steamhead and direct steam emissions are very hot, locate the steamhead where incidental contact by bather with the steamhead or direct steam emission cannot occur.
- Linear Steam Head model 104480 is suitable for MrSteam generator models MS90-400, MSSUPER1-3 and MX4-MX6.
 - Two 104480 linear steamheads must be used for models MX4, 5 & 6.
 - Using model 104480 for any steam generator model larger than the MX6, or for any non MrSteam brand generators may result in an improper installation or hazardous condition.
 - For residential use only.
 - Install in a upright orientation only. Installation in a any other orientation may concentrate the steam and result in excessive temperatures.

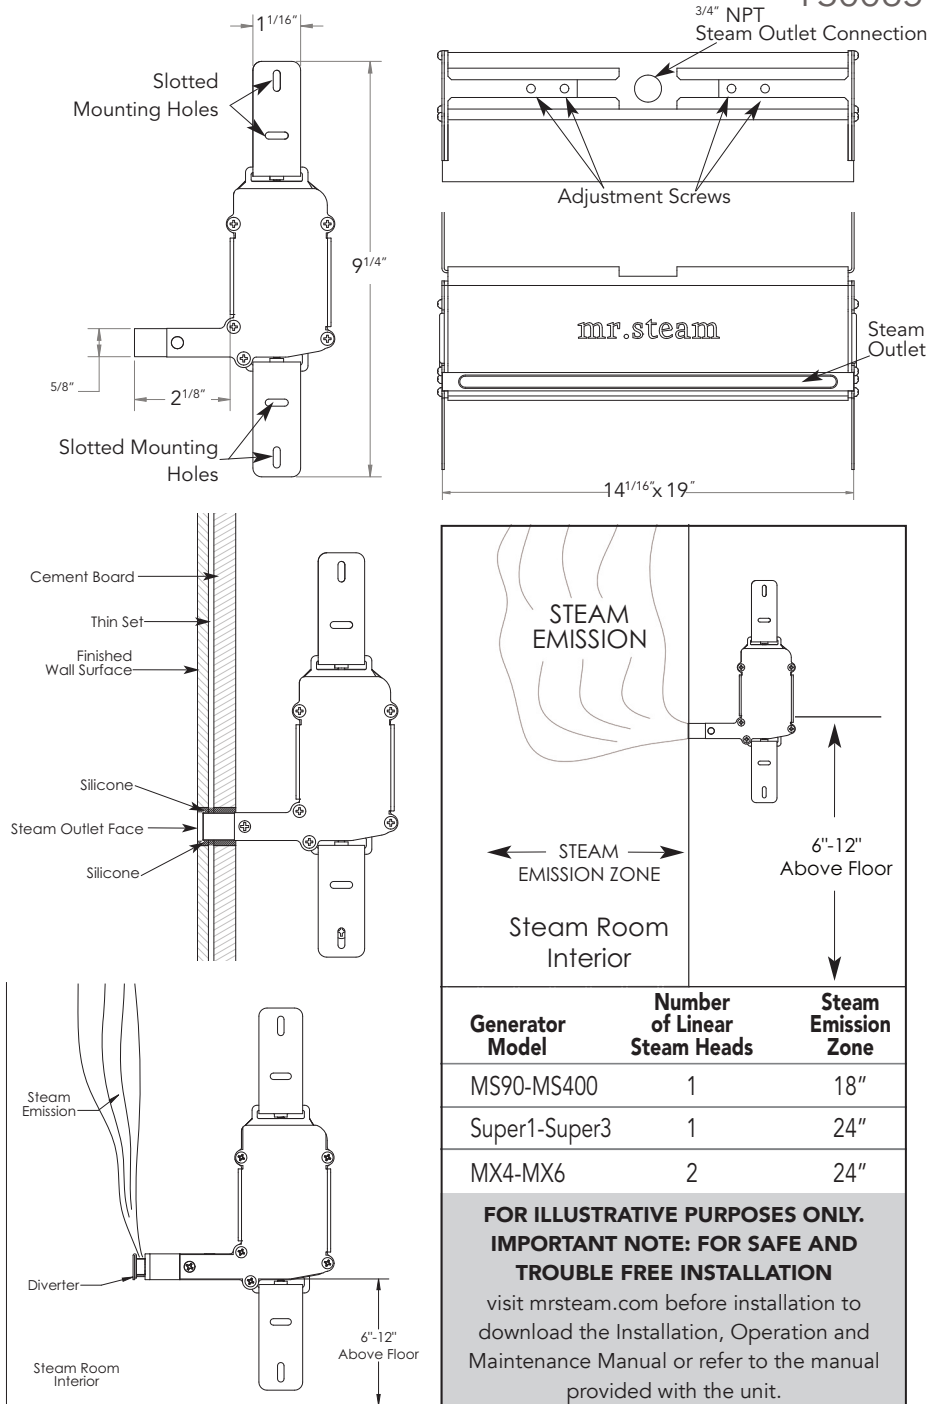

MODEL 104480		PROJECT INFORMATION	
☐ BL ☐ BB ☐ BN ☐ MB ☐ NB ☐ PB ☐ PG ☐ PC ☐ PN ☐ OB ☐ ST ☐ SB ☐ WH		Location:	Contractor:
One 104495 may be used with MX4, MX5 & MX6. See technical specification TS0088 for more information		Architect:	Submitted By:
Notes:		Engineer:	Date:

Linear Steam Head®

TS0085

Accessories



CAUTIONS because the Steam Head, Faceplate, Diverter, AromeTray, Escutcheon, Finished Diverter, and direct steam emission are very hot, locate the Steam Head, Faceplate, Diverter, AromeTray, Escutcheon, Finished Diverter where incidental contact by bather or direct steam emission cannot occur.

Included Accessories


Faceplate



AromaTray
(Black Chrome Finish Only)

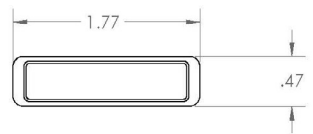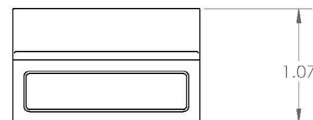


Diverter
(Stainless Steel Finish Only)

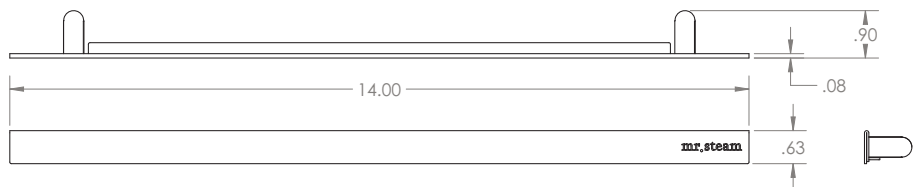


Optional Accessories

Escutcheon

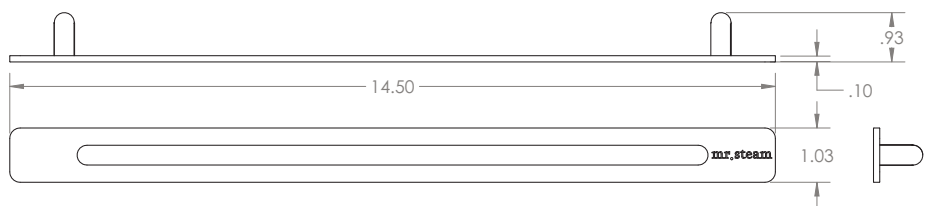

Diverter - Finished

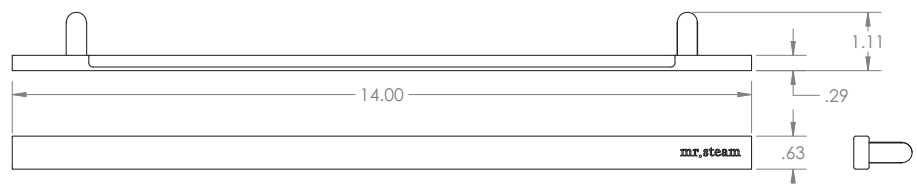

- | | | | |
|---|---|---|---|
| ☐ BL Brilliant Black | ☐ BB Brush Bronze | ☐ BN Brush Nickel | ☐ MB Matte Black |
| ☐ PB Polish Chrome | ☐ PG Polished Gold | ☐ PC Polish Chrome | ☐ PN Polish Nickel |
| ☐ NB Nouveau Bronze | ☐ ST Satin Steel | ☐ OB Oil Rubbed Bronze | ☐ SB Satin Brass |
| ☐ WH White | | | |

NOTE: Drawings are for illustrative purposes only. Consult with qualified designer, architect or contractor for steam room construction.

AutoFlush®

Box Contents


- AutoFlush Valve with Cord
- Installation instructions

Operation

The optional AutoFlush System feature automatically drains the MrSteam system following each use. A time delay allows the water to cool down (about two hours) before it drains by gravity for a safe and gentle operation.

Note: If the Express Steam® option has been installed, the AutoFlush will drain for ten minutes then refill with fresh water to begin the pre-heat cycle.

AutoFlush Shown Fully Assembled

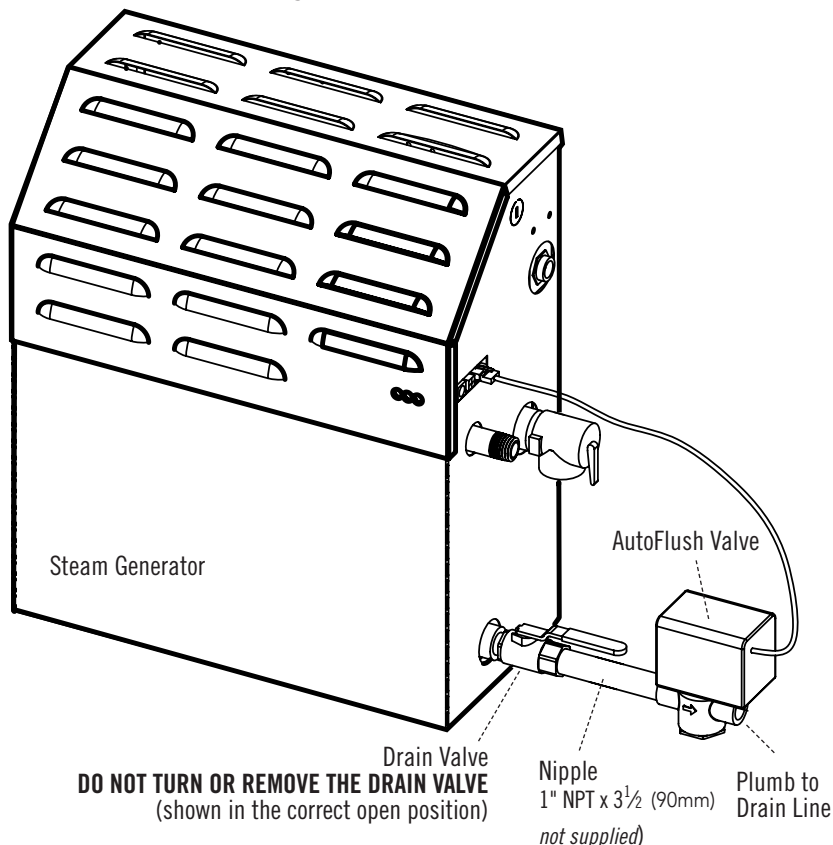

Our exclusive AutoFlush automatically and electronically drains the system, providing CleanSteam... Every Time® and introduces fresh water.

FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	PROJECT INFORMATION	
MS 81500E	Location:	Contractor:
	Architect:	Submitted By:
	Engineer:	Date:
Notes:		


Condensation Pan

103867 & 104402

Mr.Steam strongly recommends the use of a condensation pan in the unlikely event of a plumbing leak.

Locate the condensation pan on a solid level surface and place the steam generator inside the condensation pan. Insure the steam generator is level.

All plumbing shall be performed by a qualified licensed plumber and in accordance with applicable national and local codes. Check local plumbing code for receptor, trap and vent requirements. Condensation pans drain by gravity. The condensation pan is equipped with an integral 3/4" NPT fitting.

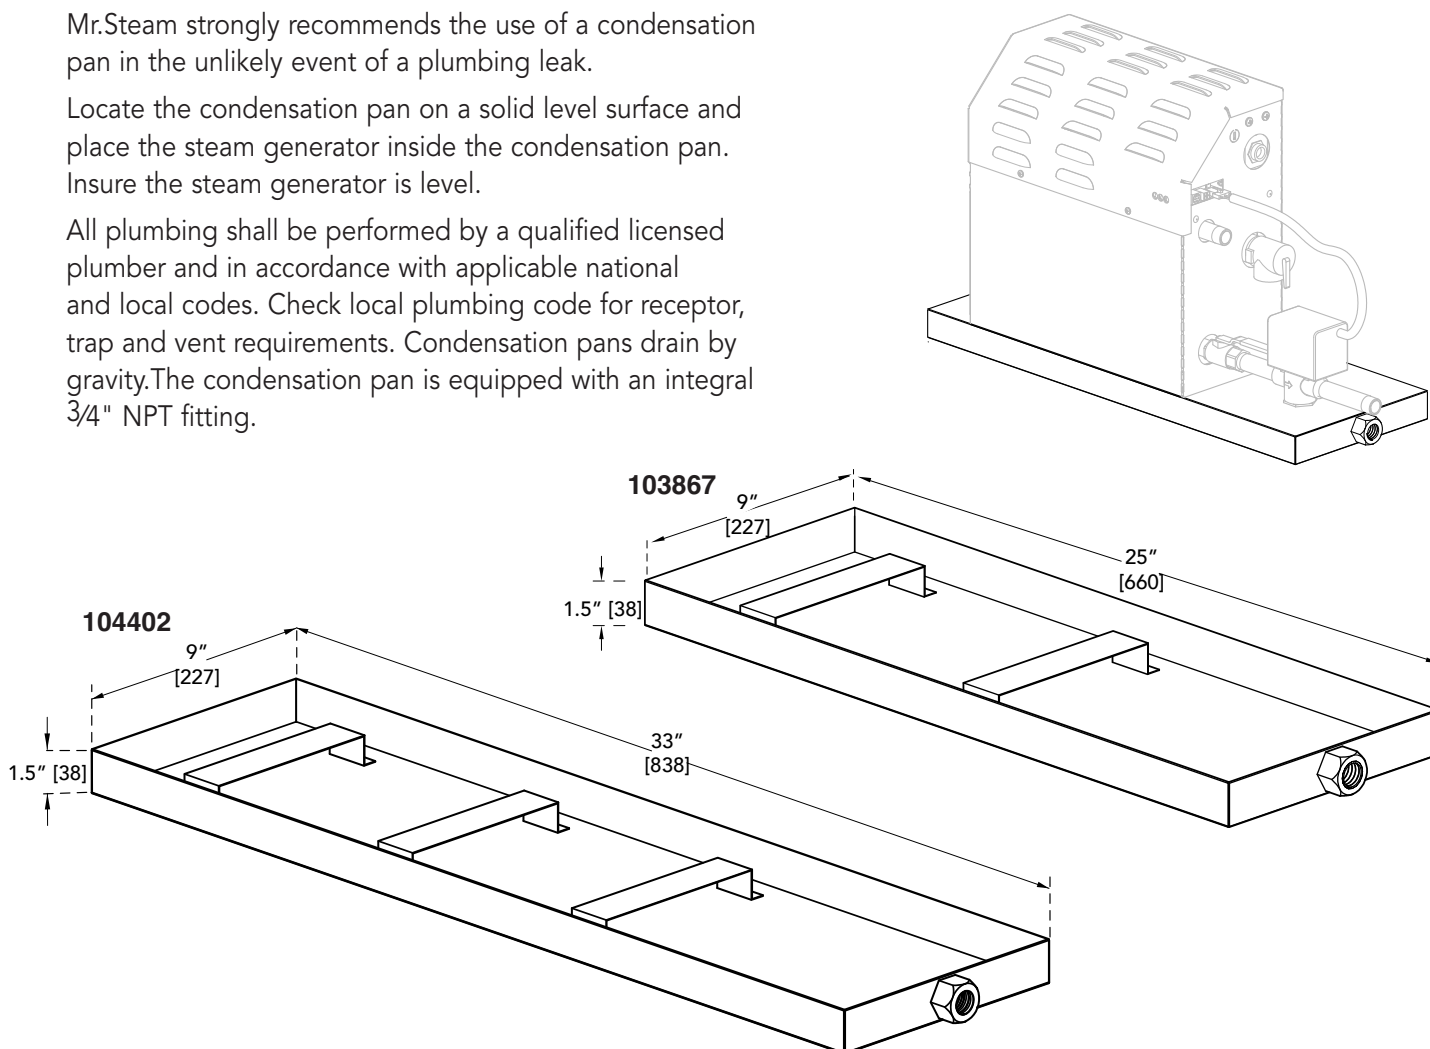

NOTE: For MX4E, MX5E and MX6E use model 104402

FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION visit mrsteam.com before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.

MODEL	PROJECT INFORMATION	
☐ 103867	Location:	Contractor:
☐ 104402	Architect:	Submitted By:
	Engineer:	Date:
Notes:		